

# OWNER'S MANUAL

## SideBURN™

PLEASE READ AND FOLLOW ALL ASSEMBLY INSTRUCTIONS, SAFETY INFORMATION, AND OPERATING INSTRUCTIONS OF THIS MANUAL BEFORE INITIAL START UP.

# IMPORTANT SAFETY INFO


## PLEASE READ CAREFULLY BEFORE USING YOUR SideBURN™

The SideBURN™ is an appliance designed only to attach to the GMG Ledge Prime 2.0 or Peak Prime 2.0 pellet grill. This product produces high heat which can cause burns or combustion if not used properly and in accordance with the following important instructions. If you DO NOT UNDERSTAND these instructions, DO NOT USE THIS PRODUCT.



### PLACEMENT AND GRILL ATTACHMENT

- This product is for OUTDOOR USE ONLY. NEVER USE ANY MODEL OF GMG PELLET GRILL INSIDE ANY ENCLOSED STRUCTURE.
- Do not plug in or turn on this appliance unless and until it is attached properly to a GMG Ledge Prime 2.0 or GMG Peak Prime 2.0 pellet grill. See page 7 instructions on how to install it on the grill.
- The back and sides of the grill must be at least 36 in. (914.4 mm) from any combustibles, and there must be at least 48 in. (1,219.2 mm) of clearance between the top of the chimney cap and any combustible materials above the grill. See picture below.

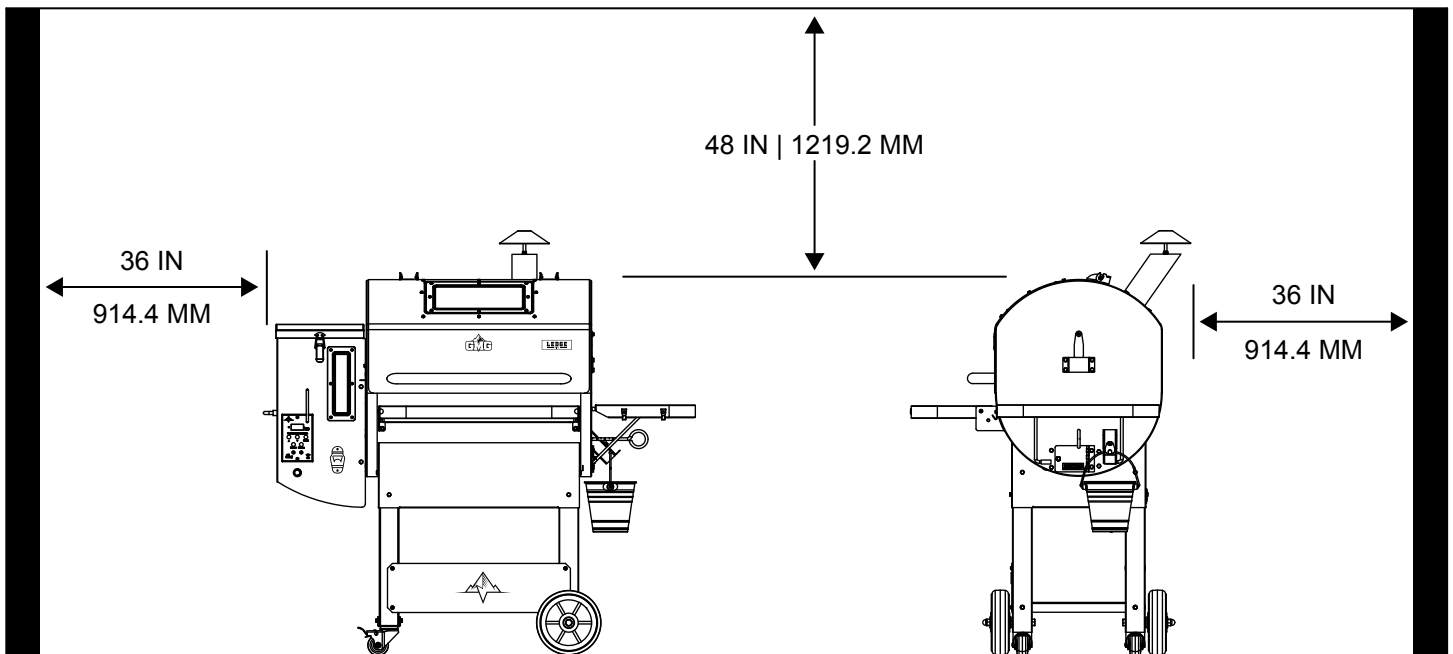



## **ELECTRICAL**

- When using any electrical appliance, such as the SideBURN™, basic safety precautions should always be followed, including all of the following:
- The SideBURN™ unit has a three-prong electrical plug. NEVER REMOVE THE THIRD (LOWER) PRONG OF THIS PLUG. NEVER USE A 2-PRONG ADAPTER. NOTE FOR CANADA CUSTOMERS: USE OF AN ADAPTER IS NOT PERMITTED IN CANADA.
- Plug the SideBURN™ into a GFI-protected isolated outdoor circuit only. The SideBURN™ must be connected to a socket-outlet having an earthing contact. This circuit must be a minimum of 15 amps and must have been installed by a licensed electrician.
- DO NOT supply power to the SideBURN™ directly from a generator (genset) unless the genset has a Residual Current Device (RCD) of no more than 30mA AND is wired to a GFI-protected circuit into which the SideBURN™ is plugged.
- Regularly examine the electrical cord for damage and discontinue use of the SideBURN™ if the cord is damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep ALL electrical cords away from any heated surfaces such as a grill or the SideBURN™ unit.
- Always unplug SideBURN™ from its electrical connection when you are not using it and before cleaning it.
- To protect against electrical shock, DO NOT immerse cord, plugs, or housing unit in water or any other liquid.



## **OPERATING PRECAUTIONS**

- Grease tray must be locked in place, grate must be installed, and cover must be removed before operating SideBURN™.
- The SideBURN™ unit is designed to be used as a food cooking appliance. DO NOT USE IT FOR ANY OTHER PURPOSE.
- Do not move the unit while it is in use or even when it is turned on.
- Always have an ABC-rated fire extinguisher nearby which is easily accessible, fully charged, and inspected. NEVER try to extinguish a fire on or within an electrical appliance using water or any other liquid.
- DO NOT use charcoal or any other combustible fuels with this unit. Do not store such items on or nearby.
- DO NOT use SideBURN™ on the ground or on any other surface.
- DO NOT use any accessory items with SideBURN™ as they may cause injuries or a fire.
- The SideBURN™ must not be used by any person with reduced physical, sensory, or mental capabilities. It must not be used by any person lacking experience and knowledge in the use of this appliance.
- Children should never be allowed to use this product or to play around it.
- DO NOT touch hot surfaces. If you do not know the temperature of a surface, DO NOT touch it. Use a temperature reading device to determine a surface's temperature before touching it.
- DO NOT use this product during inclement weather, including but not limited to high winds, rain, snow or any other form of precipitation or while standing in a damp area.
- DO NOT leave this product outdoors when not in use UNLESS it is covered. NEVER install the SideBURN™ cover before the unit has cooled completely. Do not touch the unit to determine if it has cooled, as this may cause severe burns. Use a probe thermometer instead to determine if the unit has cooled to ambient temperature.



## **BURN HAZARD FROM HEAT**

- SideBURN™ produces high heat. Use extreme care and caution when using it in order to avoid burn injuries or fires.
- Move or lift ONLY after it has cooled completely. Do NOT use the touch test to determine if it is cool enough. Use a thermometer probe instead.
- DO NOT attempt to clean the cooking grate or the grease tray until it has completely cooled.
- Be extremely careful when removing hot pots or pans containing hot liquids from the SideBURN™ as the liquids can spill and cause burns to you or someone standing nearby.
- Never lean over the unit or place hands or fingers on the edges.
- Never allow children to play near the SideBURN™. The appliance surfaces can get very hot, and accidental touching by a child may cause severe burns or scalds if they happen to immerse appendages in hot liquids atop the unit.
- Always use a covered/gloved hand when removing pots, sauté pans or food from the SideBURN™ surface. Do not touch the SideBURN™ grate, or immediate surroundings as these areas become extremely hot and can cause burns.
- DO NOT drape or place clothing or any flammable material on or near the SideBURN™. Additionally, do not lean over SideBURN™ while operating. Do not wear loose-fitting clothes or long sleeves while using the SideBURN™ as some fabrics can be highly flammable and, if ignited, may result in personal injury or death.
- Refrain from the use of aluminum foil, parchment paper or any lining that would line the SideBURN™ grate or the drip tray. By doing this, one can alter airflow for proper heat dispersion and also build up heat in the control system and damage the fan system.
- DO NOT heat up enclosed containers. Build up in a closed container could occur and cause the container to burst, possibly resulting in death, serious personal injury, or property damage.
- NEVER use SideBURN™ while under the influence of drugs or alcohol.
- DO NOT use the SideBURN™ as a hand warmer, as it will burn you severely.



## **FIRE HAZARDS**

- Make certain that the grease tray is in place before starting the SideBURN™. Hot grease can leak downward and start a fire or cause an explosion. Drip tray MUST be pushed all the way in and locked. The grease tray is located just under the SideBURN™ on the right hand side of the unit. (See pages 8 and 9 for operating and cleaning instructions.)
- Grease can be extremely flammable. Hot grease must cool down before attempting to handle or dispose of it. After use and cool-down, the drip tray should be cleaned on a regular basis and kept free of grease.
- DO NOT attempt to cook greasy items such as bacon or fatty chops, for example, directly on the SideBURN™. Grease will drip onto the burner tubes and cause a flare-up or a larger fire.
- DO NOT let the grease drip tray to fill up. If the grease tray overfills, grease may drip underneath the SideBURN™ and cause a fire.

## PRODUCT DISPOSAL

Correct disposal of this product (EU)



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

## PROP 65 - STATE OF CALIFORNIA



### WARNING

THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS) AND CARBON DIOXIDE, WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WHEN USED AS INTENDED, WITH A GMG WOOD PELLET GRILL, IT CAN EXPOSE YOU TO WOOD DUST, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER. FOR MORE INFORMATION, GO TO [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV)

## OTHER MANDATED REGULATORY WARNINGS



**WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.



**WARNING:** Accessible parts may become hot during and after use. Young children should be kept away.



**WARNING:** SideBurn™ must only be operated with grate and grease tray in place.

These product instructions are also available as a digital PDF from our customer service center by phone at 530-347-9167 OPT 1 or by email - [support@greenmountaingrills.com](mailto:support@greenmountaingrills.com).


You may also visit our website [www.greenmountaingrills.com](http://www.greenmountaingrills.com) to get these instructions.



## TABLE OF CONTENTS

SAFETY INFO	1
DIGITAL CONTROLLER	6
ASSEMBLY	7
OPERATION	8
CLEANING & MAINTENANCE	9
SUPPORT	9
WARRANTY	10

# DIGITAL CONTROLLER

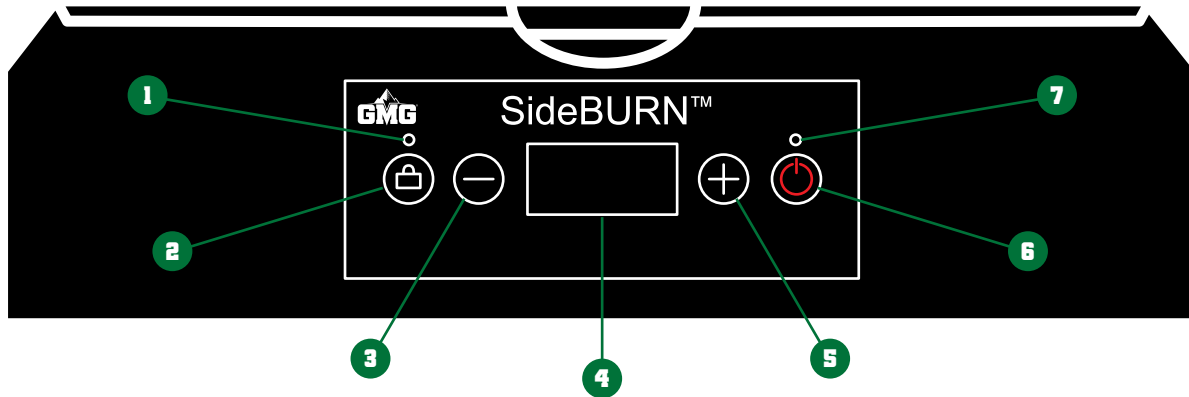

#	DESCRIPTION
1	Display Lock Indicator Light
2	Display Lock Button Press once to lock Press and hold to unlock
3	Temperature Down
4	Digital Display
5	Temperature Up
6	Power Button
7	Power Button indicator Light

POWER METER - NORTH AMERICAN MODELS				
Gear	Voltage(V)	Frequency(Hz)	Total Current Requirement(A)	Total Power Requirement(W)
P1	120V	60Hz	5.0±10%	300
P2			7.2±10%	500
P3			8.6±10%	800
P4			9.9±10%	1000
P5			11.0±10%	1200
P6			11.8±10%	1400

POWER METER - EU MODELS				
Gear	Voltage(V)	Frequency(Hz)	Total Current Requirement(A)	Total Power Requirement(W)
P1	220V	50Hz	2.9±10%	300
P2			3.9±10%	500
P3			4.8±10%	800
P4			5.5±10%	1000
P5			6.2±10%	1200
P6			6.6±10%	1400

**NOTE:** The P6 Gear actual power is no more than 1400W.

# ASSEMBLY

SideBURN™ can only be installed and used on Ledge or Peak Prime 2.0 pellet grills. It will not fit and is not for use on GMG Trek Prime 2.0 pellet grills.

## 1 REMOVE SIDE TRAY






Remove the existing side tray and side tray locking bar from the Ledge or Peak grill before installing the SideBURN™.

## 2 INSTALL SideBURN™



Line up the pins on the side of the SideBURN™ with the hollow cylinders on the side of the grill. Slide in as far as it will go.

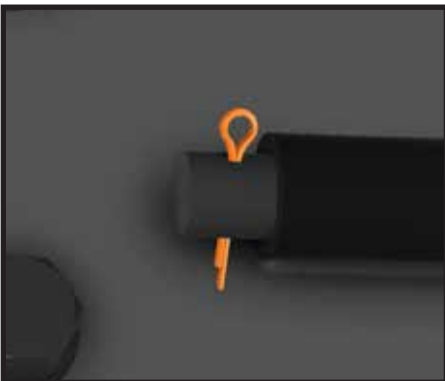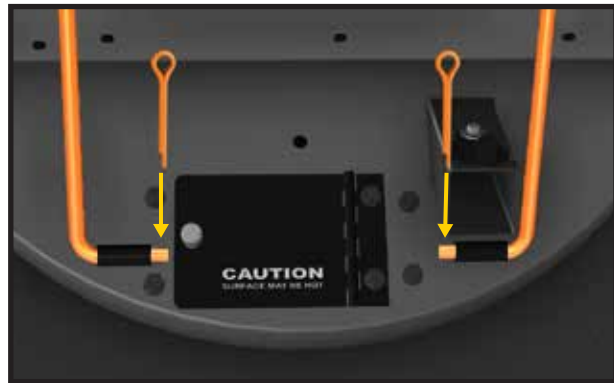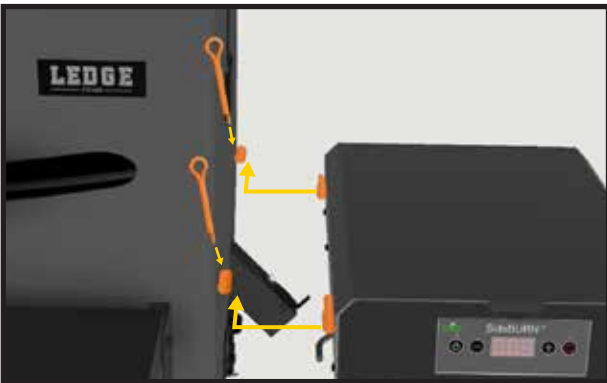

### ! IMPORTANT

All FOUR locking pins MUST BE INSTALLED to lock the unit in place.

GMG Products LLC accepts NO RESPONSIBILITY for injuries, fires, or any other damages occurring from failure to lock the Sideburn™ into place with these mandatory pins or from failure to otherwise correctly assemble this product.

IF YOU DO NOT UNDERSTAND HOW TO ASSEMBLE THIS UNIT CORRECTLY, CONTACT GMG'S CUSTOMER SERVICE (info on page 9).







# OPERATION

## POWERING ON

### IMPORTANT

**Grease tray must be locked in place, grate must be installed, and cover removed before operating SideBURN™.** The grate may be installed with either side up. The flat side is for heating pots and pans, while the grated side is for searing steaks.

- 1** Plug the unit into a 15 amp dedicated outlet with ground fault protection that has been properly installed by a professional electrician.
- 2** Press  once.
- 3** The display is locked upon startup for safety reasons so press  to unlock and set your temp.
- 4** Set the desired heat setting from 1-6 using  or  with 1 being the lowest and 6 being the highest heat setting. (See table below for approximate temperatures). You will hear the fan kick on. The heat tubes will start to get hot.

## ADJUSTING TEMPS

You can adjust the heat settings by simply using  or  while the unit is running.



Setting	Maximum Temp	
	°F	°C
P1	284-338	140-170
P2	392-446	200-230
P3	464-518	240-270
P4	518-572	270-300
P5	590-644	310-340
P6	644-698	340-370

The temperatures shown in this table are guidelines only. GMG Products LLC does not guarantee that your unit will match the temperatures shown in this table. Your temperatures may vary depending on wind, ambient temperatures and other factors.



The maximum temp (698°F, 370°C) was measured in the center of the plate. Thus, as you would expect, the sides did not get as hot as the very center of the plate. Depending on outside temperatures it may take 30-40 minutes to reach maximum temp.

## LOCKING DISPLAY

The Lock button can be used to lock the temperature setting so that it cannot be changed accidentally.

Press  once to lock and press and hold  to unlock.

## POWERING DOWN

To power down, simply press  button. If the display is locked, you must unlock by pressing and holding  button before you press the power button to power down. Once the display reads "OFF" the unit can be unplugged.

# CLEANING & MAINTENANCE

It is NOT SAFE to clean any part of the SideBURN™ while it is still hot. You MUST power down the unit and UNPLUG IT from its electrical supply before you clean it or otherwise touch it. If you do not know if the unit is cold, use a temperature reading device such as a probe to determine if the unit is cold.

Never use abrasive cleaners (e.g., metal pads) or oil-based liquids to clean this appliance. Never use running water on this appliance.

Remove the grate and the grease tray to clean thoroughly.

Install a cover to ensure that no water seeps into the device. DO NOT PUT A BBQ COVER OR ANYTHING FLAMMABLE ON OR UNDER THE GRILL WHILE THE UNIT IS IN USE.

## DRIP TRAY

The drip tray located under the side burner (Right Side) should be cleaned periodically to prevent buildup of grease and/or debris.

NOTE: Allow the drip tray to cool before attempting to clean.

IMPORTANT: Do not leave the SideBURN™ outside during inclement weather unless it is covered. Use the cover only after the unit is off and has cooled off. Rainwater can collect inside the bottom of the side burn if not covered.

If the drip tray is not cleaned after use and the side burner is left uncovered, the drip tray will fill with water. Grease and water may build up around the glass elements in the SideBURN™ which WILL CAUSE the unit to fail.

## COOKING GRATE

The cooking grate should not be removed for cleaning until the appliance is turned off, unplugged, and has cooled to ambient temperature. Doing so before the unit has cooled may cause injuries. The SideBURN™ grate may be cleaned with a BBQ cleaning product.

# CUSTOMER SUPPORT

Have a question with SideBURN™ assembly or operation?



Call us at:  
530-347-9167 OPT 1



Email us at:  
[support@greenmountaingrills.com](mailto:support@greenmountaingrills.com)

For troubleshooting, service parts, & general support check out our support page:



SCAN ME



[GREENMOUNTAINGRILLS.COM/SUPPORT](https://GREENMOUNTAINGRILLS.COM/SUPPORT)



This LIMITED WARRANTY covers defects in workmanship and materials for a period of one (1) year from the date of first retail purchase. During the warranty period, GMG Products, LLC (dba Green Mountain Grills) will replace or repair, at its sole option, any defective SideBURN™ returned to us, or to one of our dealers, by its original purchaser. Any claims under this warranty must be received by the expiration of the warranty period.

This warranty does not cover problems that result from abuse, accident, misuse, or problems with electrical power. It does not cover cosmetic elements and components, such as paint and other finishes. It does not cover uses not in accordance with the instruction manual. It does not cover commercial use of the product. It specifically excludes products for which Green Mountain Grills has not received payment.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE (PROVINCE TO PROVINCE IN CANADA). GREEN MOUNTAIN GRILLS RESPONSIBILITY FOR DEFECTS IN MATERIAL AND WORKMANSHIP SHALL BE LIMITED TO REPAIR AND/OR REPLACEMENT AS SET FORTH IN THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES AND WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. NO OTHER WARRANTIES ARE PROVIDED.

IN NO EVENT WILL GMG PRODUCTS, LLC (dba GREEN MOUNTAIN GRILLS) HAVE ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER TO THE ORIGINAL PURCHASER OR WITH RESPECT TO ANY THIRD-PARTY CLAIMS FOR DAMAGES AGAINST THE RETAIL PURCHASER OF THIS PRODUCT. SOME STATES (PROVINCES IN CANADA) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS MAY NOT APPLY TO YOU.

To exercise your rights under this warranty, contact the dealer from whom you purchased it, or call us at 530-347-9167.

**REGISTER YOUR WARRANTY HERE:**  
[greenmountaingrills.com/warranty-registration](http://greenmountaingrills.com/warranty-registration)



FOLLOW THE  
**GMG NATION**



[GREENMOUNTAINGRILLS.COM](https://www.greenmountaingrills.com)